

TWS12 – INSTALLATION GUIDE



Structural Cable: 1/4" (others)
Cordgrips: Ø0.170"-0.450" Power Cable



1. Install Hanger (Purple Loctite™ Supplied)



2. Partially dis-assemble LED



3. Assemble wire compartment to housing (Loctite)



4. Attach to hanger - Do NOT use Loctite with nyloc nut



5. Feed power cable and/or cut at aperture


TWS12 – INSTALLATION GUIDE



6. Remove cable(s) and strip 9"



7. Re-install power cables and tighten cordgrips

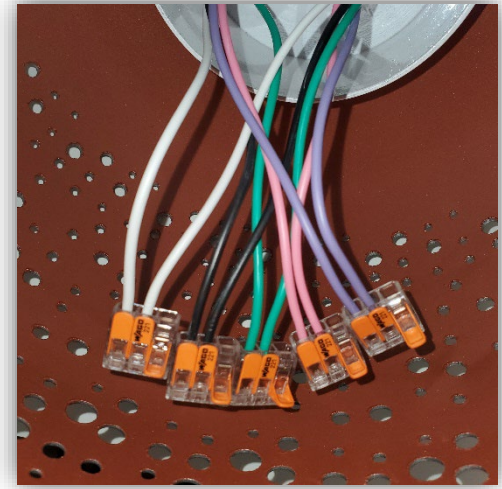

8. Supplied WAGO™ connectors



9A. Install LED to wire compartment with thumb screws (2) (Loctite)



9B. (Reference only) - shown without housing



10. Installation Complete